


NOTE: Template may not be true-to-size. Please use for reference purposes only. Do NOT drill until measurements are verified.

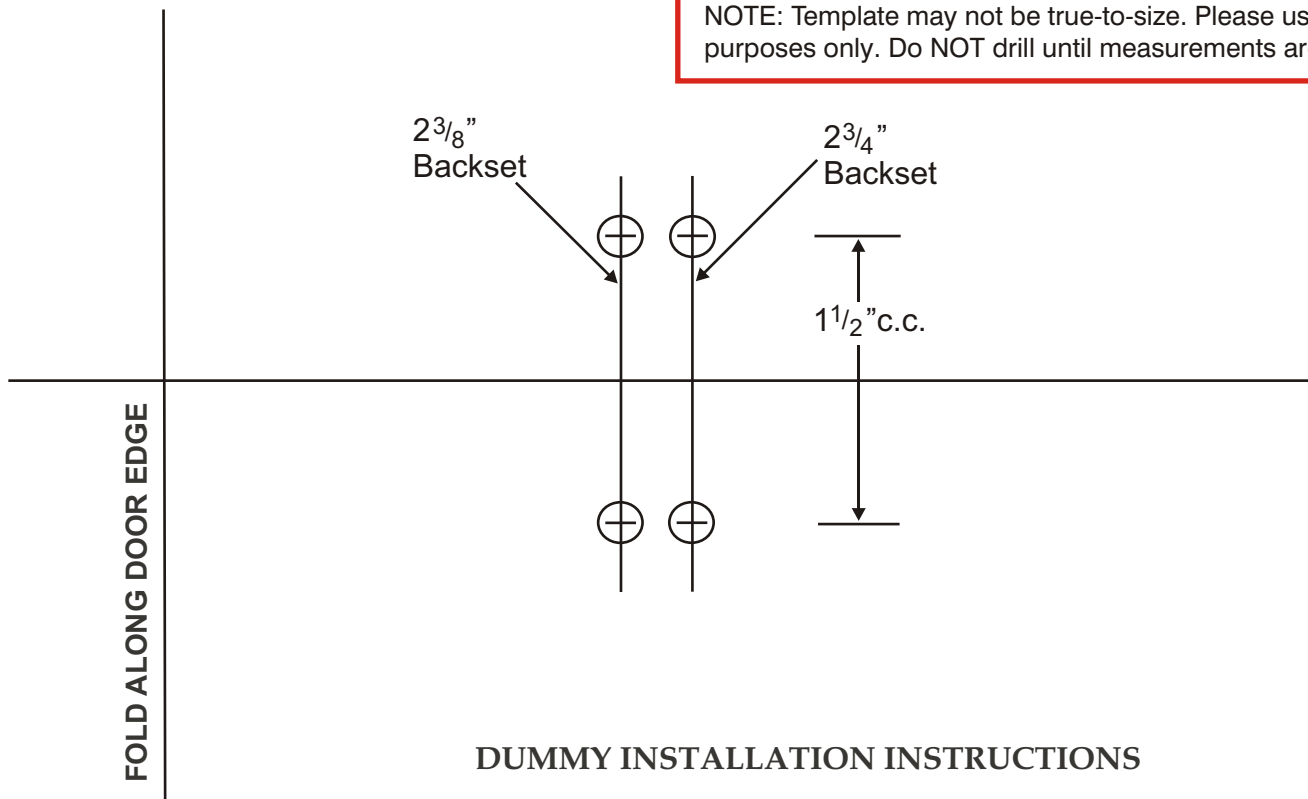

DUMMY INSTALLATION INSTRUCTIONS

- 1) Mark the face of the door with a light horizontal pencil line at 38" from the floor, (or at the desired height).
- 2) At the correct backset, mark the face of the door with a minimum 2.5" light vertical pencil line centered on the horizontal line at the appropriate backset.
- 3a) **Lever:** Align the line of the sub-rose with the horizontal line drawn.
- 3b) **Knob:** Align the line of the sub-rose with the vertical line drawn.
Note: The teardrop machining of the dummy stud (that protrudes from the center of the sub-rose) should face the setscrew hole of the lever or knob. In most cases, for levers the teardrop machining should face the hinge side of the door and for knobs it should face the floor.
- 4) Mark with a pencil the three holes of the sub-rose.
For thru-bolting, mark only the two larger holes opposite each other.
- 5) Drill no more than a 1/8" pilot hole for the mounting screws.
For thru-bolting, drill a 1/4" hole through the door.
- 6) Fasten the sub-rose to the door with three wood screws.
For pair of dummies, thru-bolt a sub-rose on each side of the door using sex bolts. (Be sure the spindle is in the proper position.)
- 7) Screw the finished rose cover onto the dummy sub-rose.
- 8) Slide the nylon washer over the shank of the lever or knob and slide the lever or knob onto the dummy spindle.
- 9) Insert set screw into the lever or knob and tighten.

Installation is now complete.

For pairs of dummies, repeat this on the other side of the door.