


1. Adjust and install latch

Measure your door backset as shown.


⚠ If backset of door measured 2-3/4" (70mm), adjust latch shown by grasping the spring pin and moving it to the 2-3/4" slot.

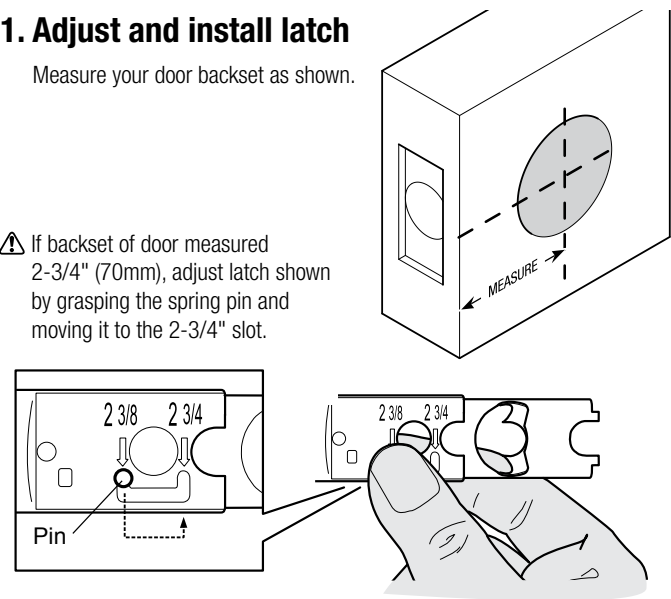


LATCH ASSEMBLY AND INSTALLATION

⚠ Make sure the slant of latch bolt faces in the direction that the door closes.

For Square Corner and Round Corner

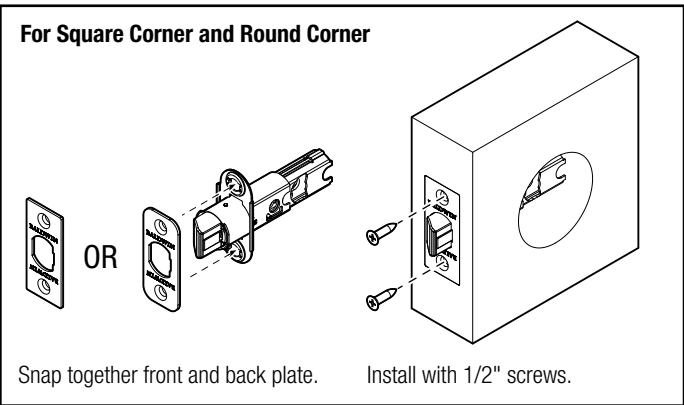


For Drive In Latch

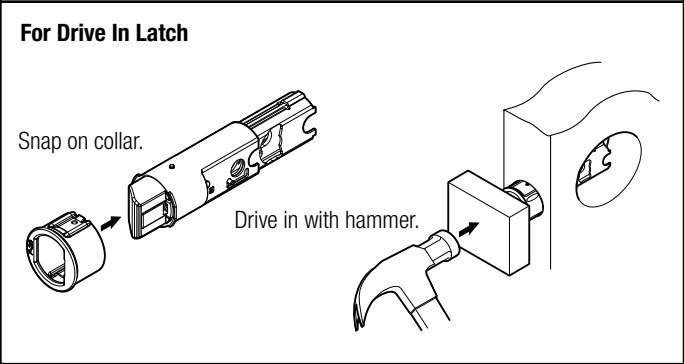


2. Install spindle

If not already installed, insert the half round spindle into exterior chassis.

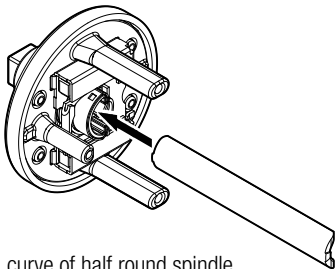


3. Install chassis

Push and hold in latch bolt, align curve of half round spindle with latch, and install exterior chassis.

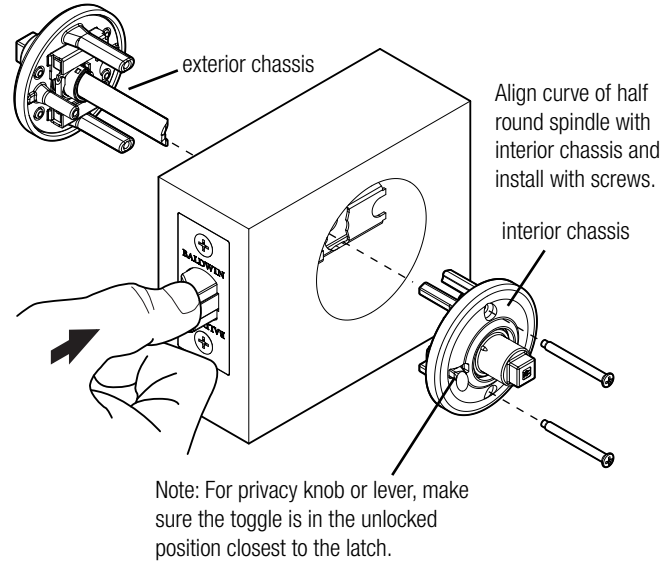


4. Install knob/lever


Place knob or lever onto chassis and turn set screw clockwise to secure. Repeat for knob or lever on the other side.

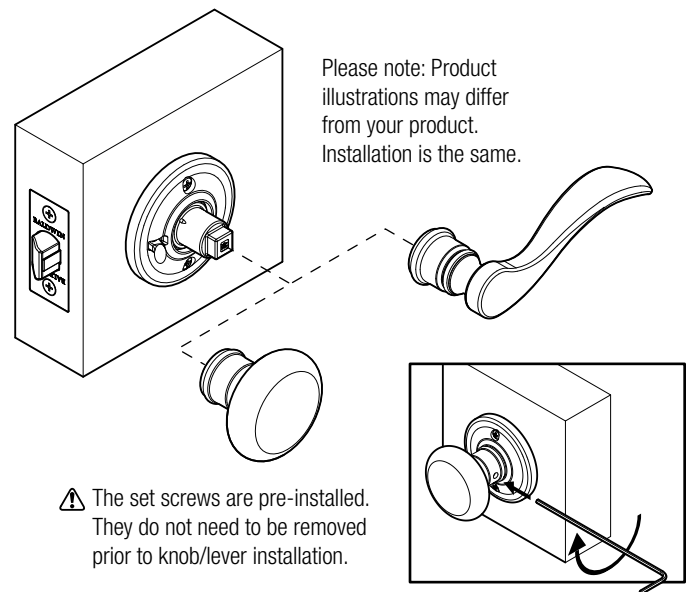

5. Install strike

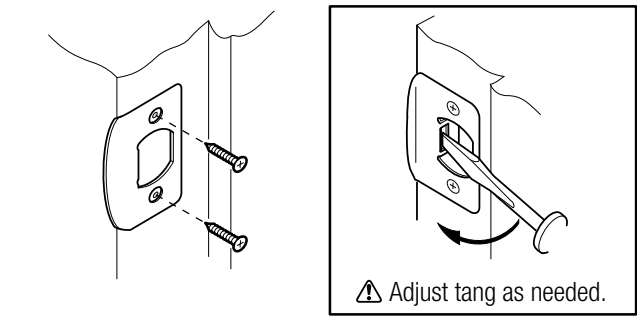


⚠ Save the bedroom/bathroom emergency unlock tool for future use. For privacy function only.

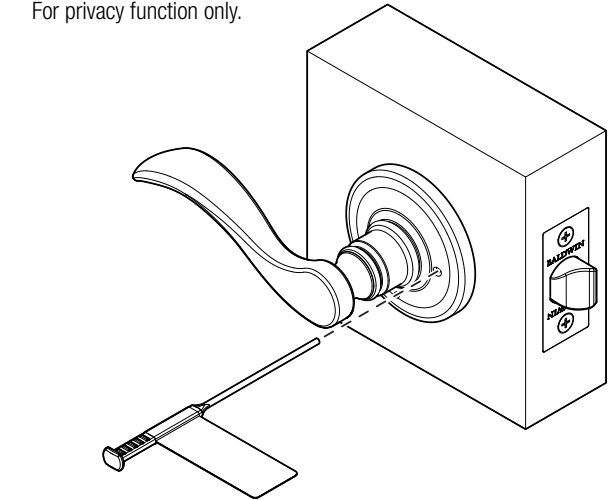

THICK DOOR KIT INSTALLATION INSTRUCTIONS
(AVAILABLE SEPARATELY)

Supports 2" (51 mm) up to 2-1/2" (64 mm) doors


After the completion of Step 1, install the longer half round spindle supplied in the kit. Install the privacy pin on privacy products only. Proceed to Step 3 and install with longer screws. During Step 5, install strike supplied in the kit.

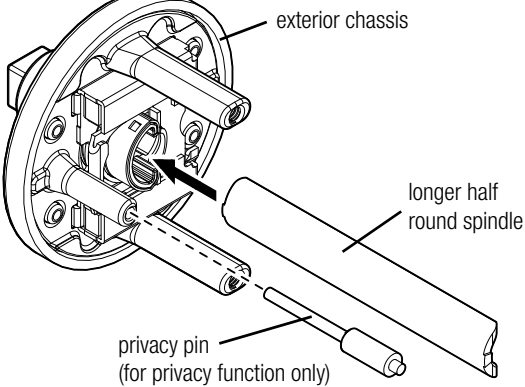


Door Preparation

If your door requires drilling, use the supplied template below with the door preparation instructions available at www.baldwinhardware.com

TEMPLATE

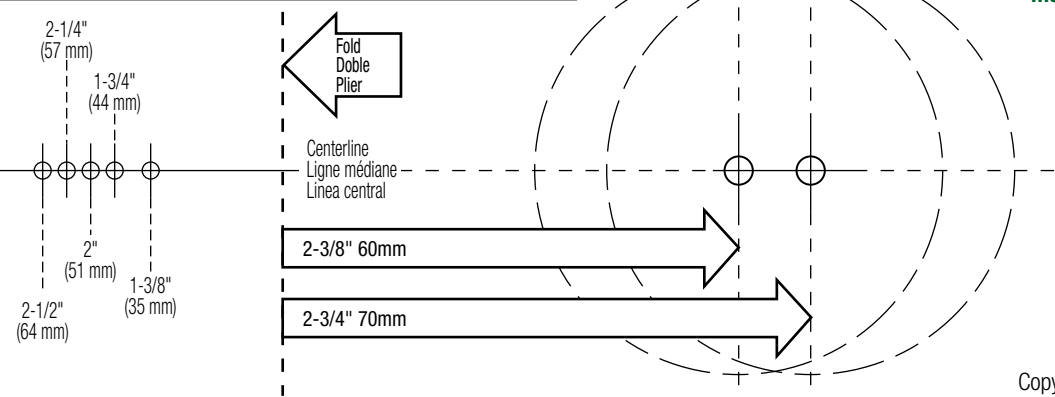

The drilling template must be printed to scale to ensure correct hole placement. To confirm correct print scale, the square below must measure exactly 1" by 1" (25mm x 25mm).

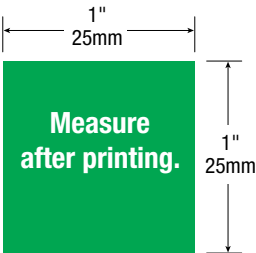

(El servicio al cliente tiene juegos de reparación para puertas gruesas de 2" (51 mm) a 2-1/2" (64 mm))

Copyright © 2011 Baldwin Hardware Corporation