


# LATCH AND STRIKE TEMPLATE

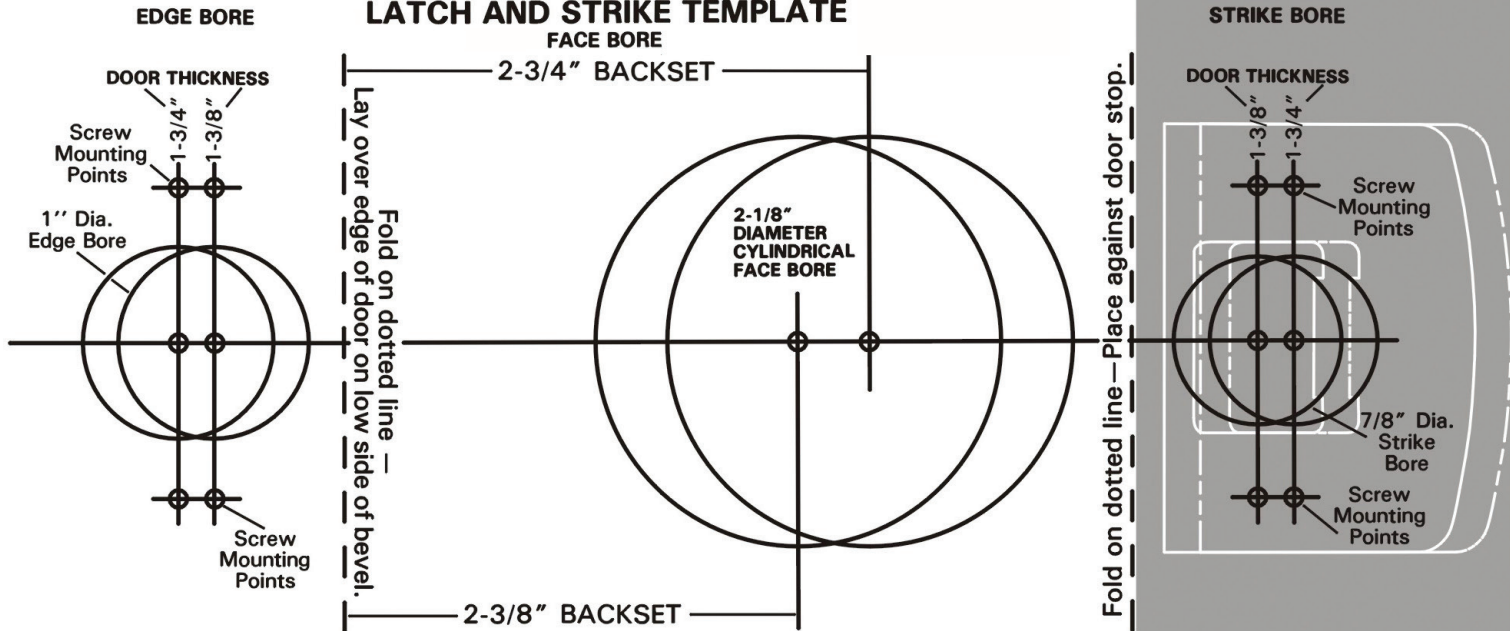

## STRIKE BORE

DOOR THICKNESS

1-3/4"  
1-3/8"

Screw  
Mounting  
Points

7/8" Dia.  
Strike  
Bore

Screw  
Mounting  
Points

Fold on dotted line — Place against door stop.

## LATCH AND STRIKE TEMPLATE

FACE BORE

2-3/4" BACKSET

2-1/8"  
DIAMETER  
CYLINDRICAL  
FACE BORE

2-3/8" BACKSET

## EDGE BORE

DOOR THICKNESS

Screw  
Mounting  
Points

1-3/8"  
1-3/4"

1" Dia.  
Edge Bore

Screw  
Mounting  
Points

Fold on dotted line —  
Lay over edge of door on low side of bevel.