



# Choose Trimsets For 7 Door & Lock Configurations


Both Keyed And Non-Keyed Functions Available For Each Configuration

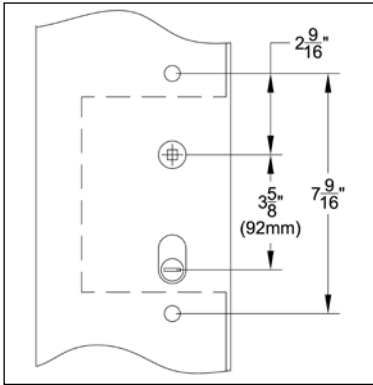


Door Configuration #1  
American Cylinder Below Handle  
3 5/8" Center to Center

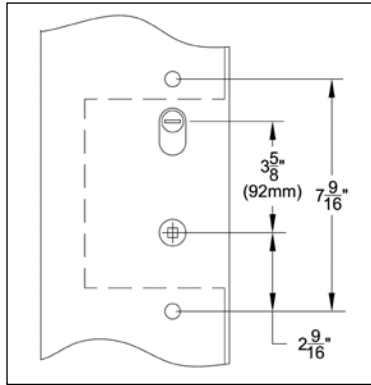


Door Configuration #2  
American Cylinder Above Handle  
3 5/8" Center to Center

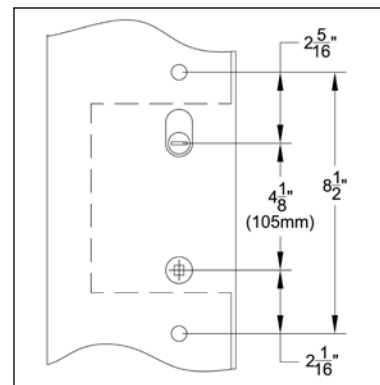


Door Configuration #3  
American Cylinder Above Handle  
4 1/8" Center to Center

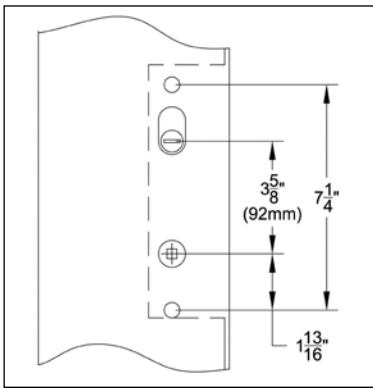


Door Configuration #4  
American Cylinder Above Handle  
3 5/8" Center to Center

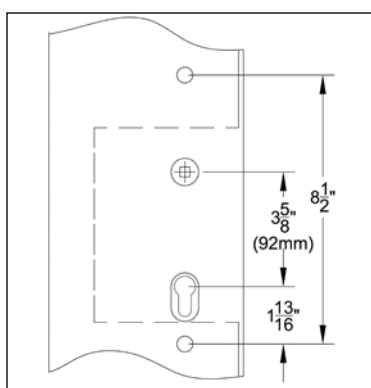

Door Configuration #5  
Euro Profile Cylinder Below Handle  
3 5/8" Center to Center

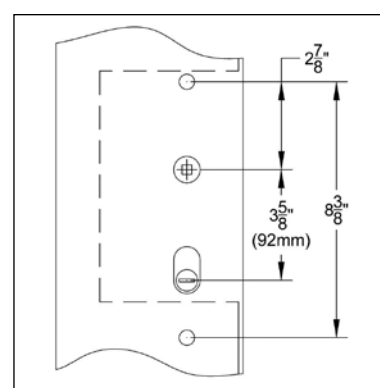

Door Configuration #6  
American Cylinder Below Handle  
3 5/8" Center to Center

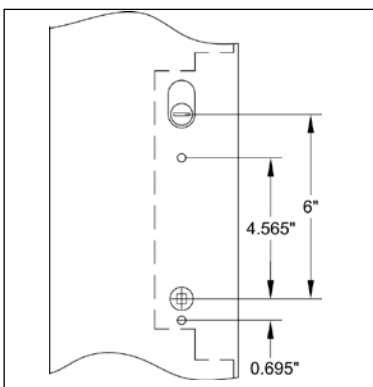

Door Configuration #7  
American Cylinder Hub Above Handle  
6" Center to Center

## >> To determine your Multi-Point Lock configuration:

- 1) Identify the manufacturer of your patio door and multi-point lock
- 2) Measure center-to-center hole spacing between lever and the cylinder
- 3) Check the lever position, is it above or below the cylinder?
- 4) Identify the type of cylinder used in the door, is it American or Euro Style Cylinder?