



DOOR DETAIL

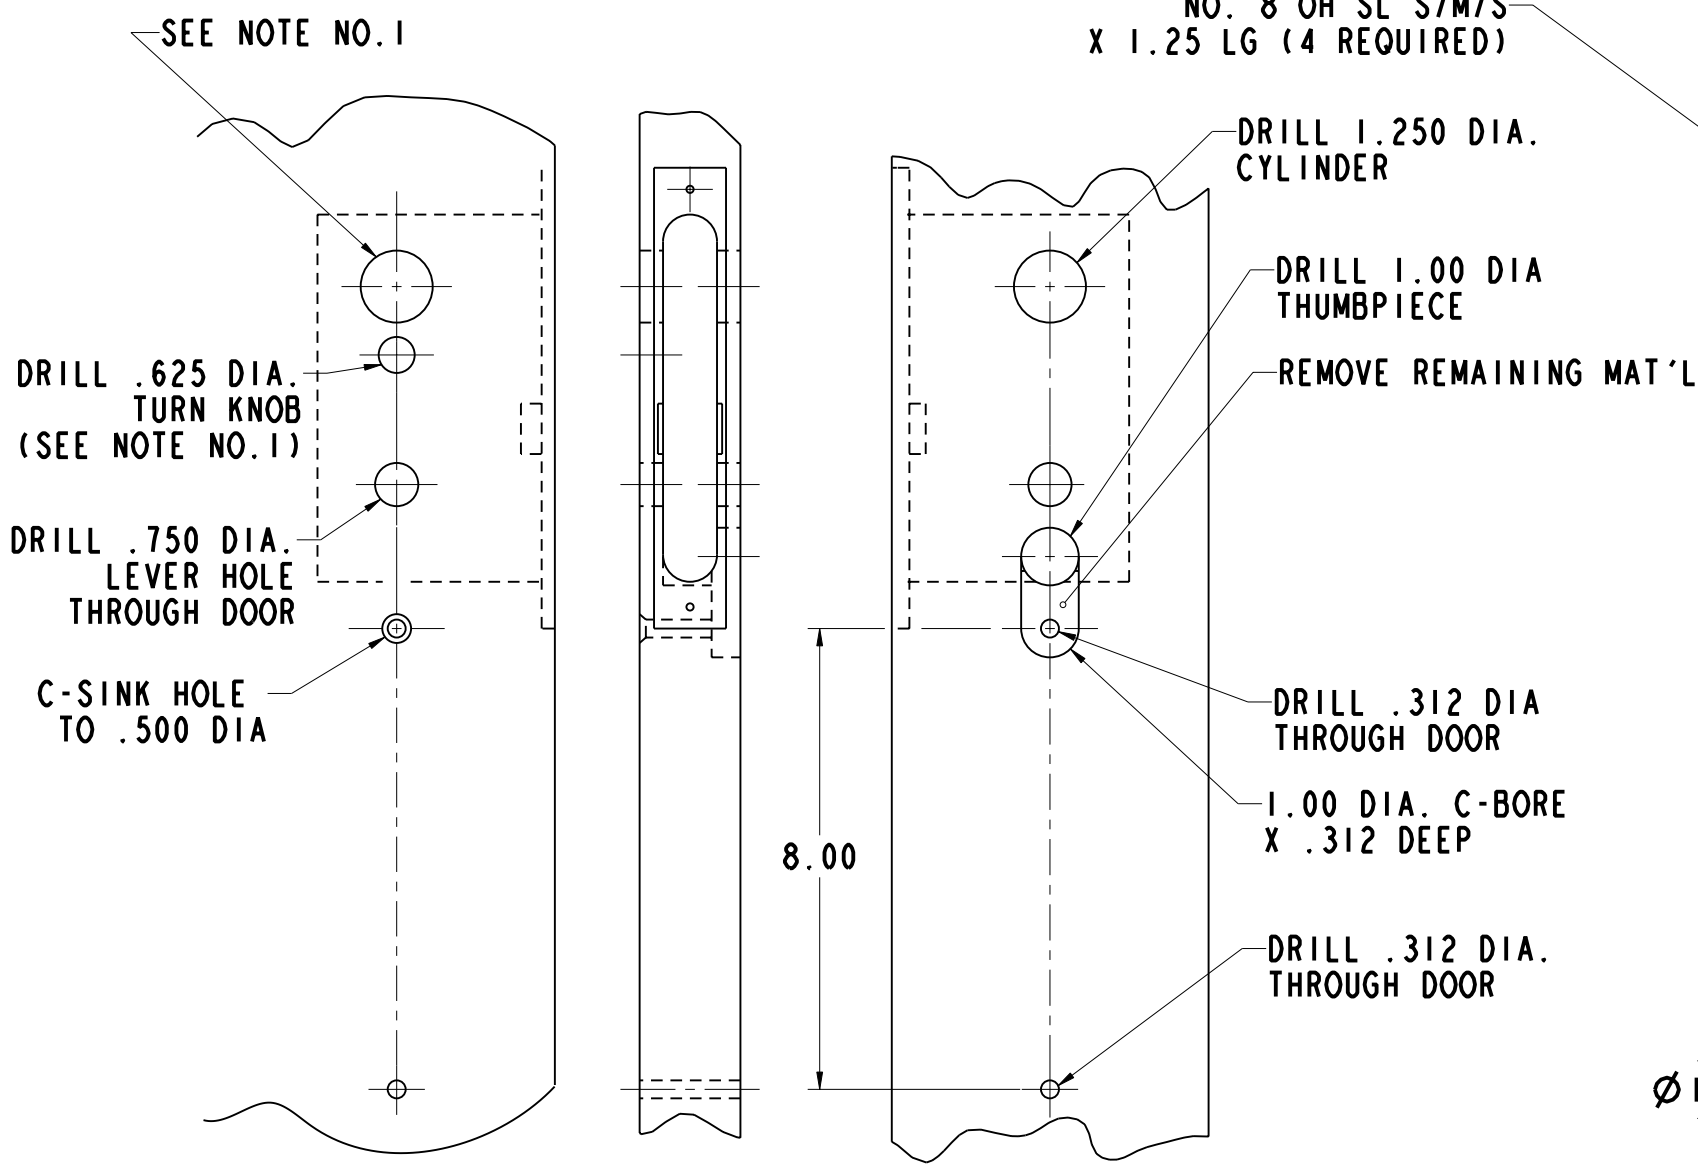

INSIDE

OUTSIDE

TRIM DETAIL

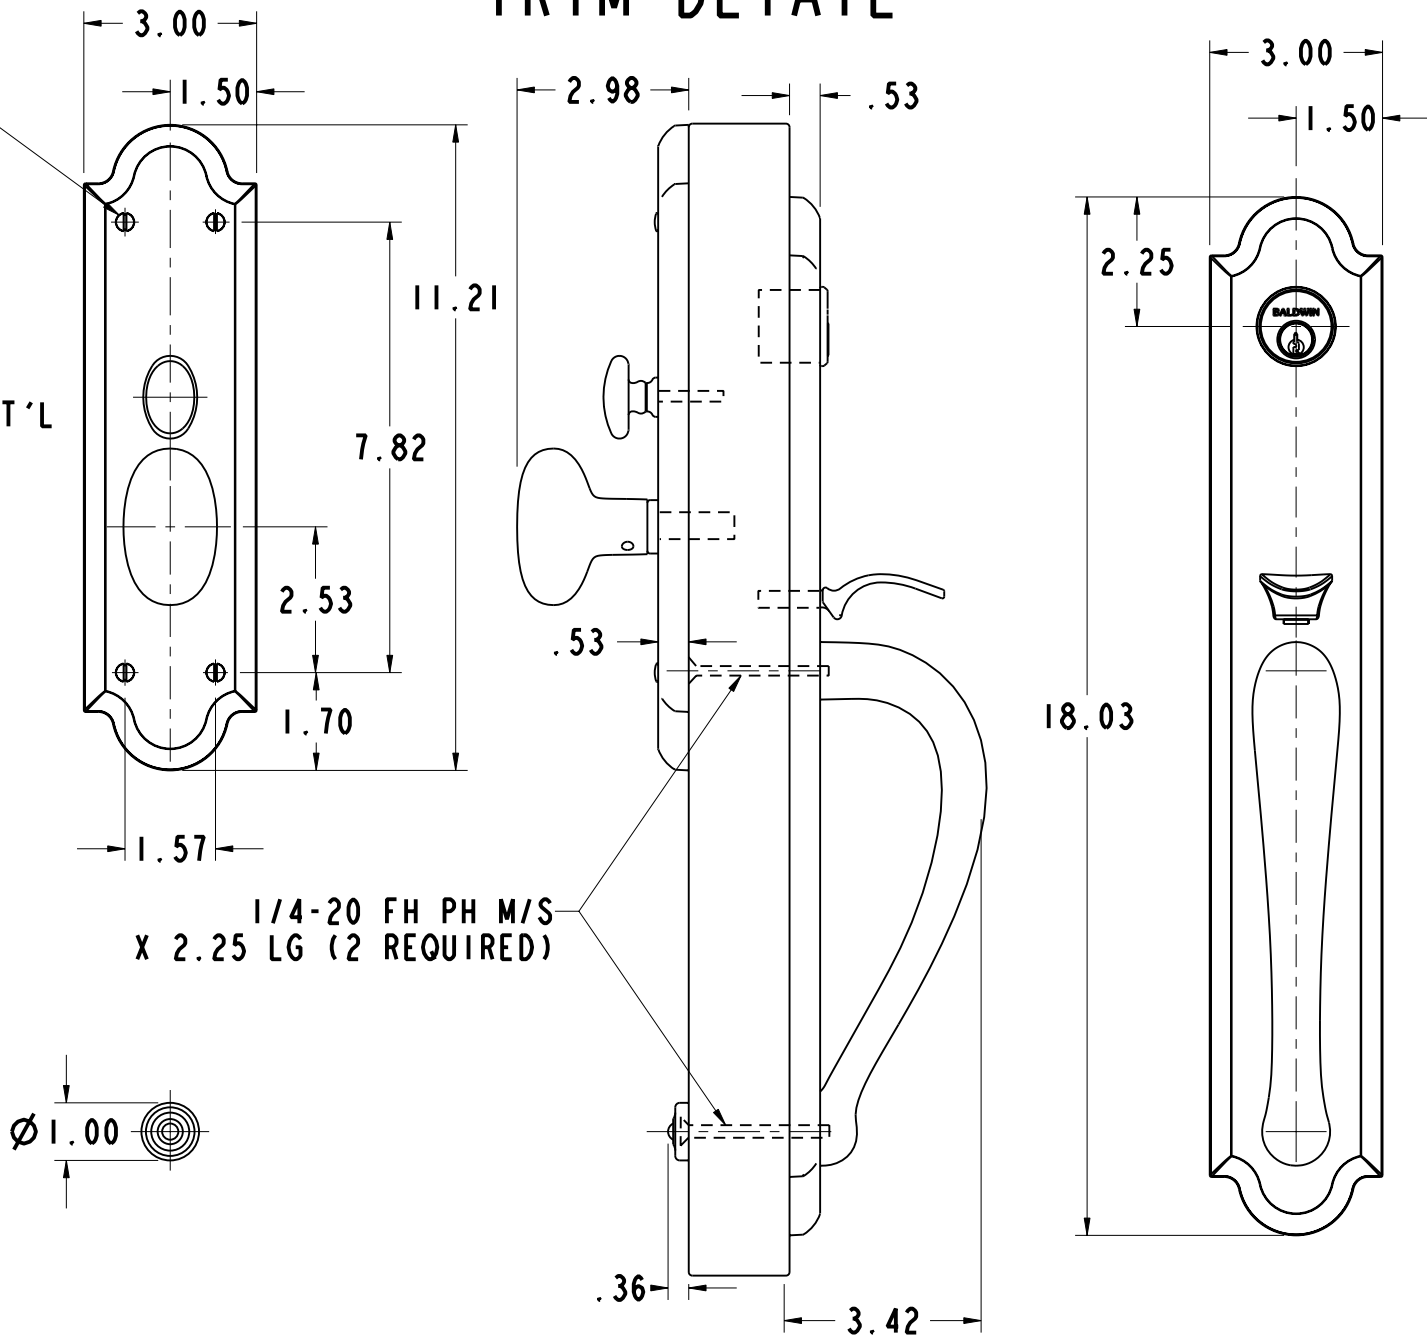

NOTE:

- 1) WHEN PREPARING DOOR FOR L_R DBL FUNCTION, OMIT DRILLING OF $\varnothing .625$ TURN KNOB HOLE (INSIDE). DRILL A $\varnothing 1.250$ CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
- 2) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 3) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 4) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

B

BALDWIN

HARDWARE CORPORATION

READING, PENNSYLVANIA

A

BLACK&DECKER

COMPANY

M514 BOULDER TRIM

TEMPLATE: NO VARIATIONS

TEMPLATE NO. I-514

DO NOT SCALE DRAWING

© 2006 BY BALDWIN HARDWARE CORPORATION

EFFECTIVE 10-22-07